

ASSEMBLING THE CORDLESS ELECTRIC MOWER

- 1) Lay the assembly pieces out, as pictured below. Set the battery, battery charger, and grass catcher to the side.



Note that the only hardware required is attached to the middle section of the handlebar.


- 2) Lay the pieces out as pictured below



- 3) Use the orange knobs and bolts pre-installed on the middle handlebar section to attach the middle handlebar section to the upper and lower sections

ASSEMBLING THE CORDLESS ELECTRIC MOWER

- 4) Flip the Reel Mower over to expose the underside

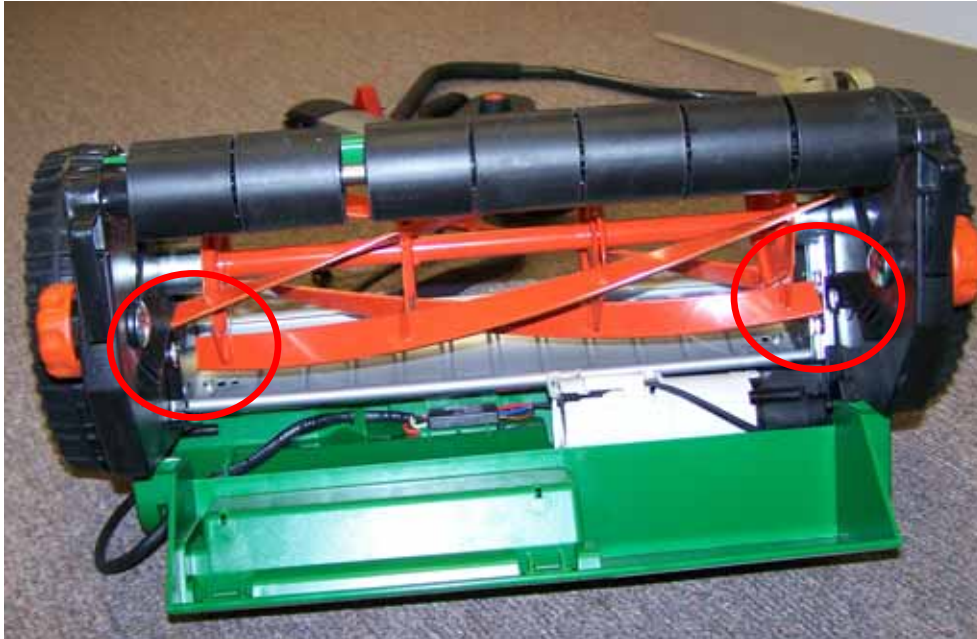

- 5) Slide the lower handlebars onto the silver knobs



- 6) Turn the Reel Mower back over onto its wheels and tighten up all nuts and bolts
- 7) The Reel Mower is assembled!

ASSEMBLING THE CORDLESS ELECTRIC MOWER

- 8) To adjust the cutting height, locate the orange knobs on each side, slightly behind the wheels



ASSEMBLING THE CORDLESS ELECTRIC MOWER

- 9) With the orange knobs loosened, look at the front of the Reel Mower for two black handles – there will be one on each side of the front



- 10) Move the handles up or down to the desired cutting height, then tighten up the orange knobs... remember there is an orange knob on each side of the mower.